

TOP 10 REASONS WHY THE CARDINAL ARMOR® IS THE **TOP PORTABLE TRUCK SCALE**


MODULAR PLATFORM DESIGN

Cardinal Scale's versatile weighbridge design is modular with expandable bulkheads, so you may vary sizes as your weighing needs change.




OPTIONAL WING-KIT AVAILABLE

Allows fill material to be used for approach ramps and prevents backfill into the scale. Left and right side bolt-on wings and required hardware for one end weighbridge.

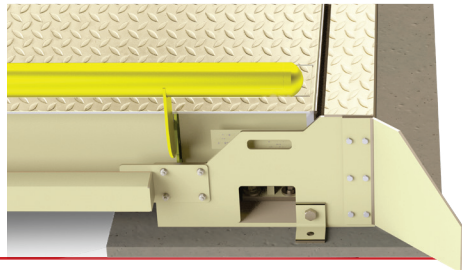


STRAP KIT COMES STANDARD

The Cardinal ARMOR® Portable truck scale is the easiest to load and off load for optimal movement from site to site. Free strap kit included with each order.

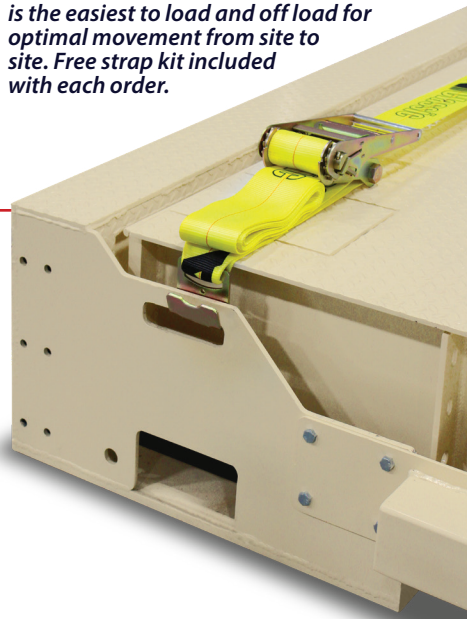

OPTIONAL 26-in DOUBLE-PIPE GUIDE RAILS

The optional SRXD series 26-inch-high, double-pipe guide rails provide an extra vertical row of guide rails that help with visibility and driver safety.

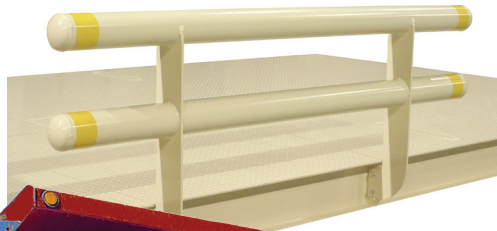

NO POWER AT THE SCALE


Gets you up and running fast! The ARMOR's digital SmartCell® system doesn't require any junction boxes, and the digital load cells plug and play with each other.

SIMPLY PLUG IN THE HOME RUN CABLE



Setup is easy, because the scale is driven by the Cardinal 225D Navigator indicator with inbound/outbound weighing. The 225D's ID storage allows you to easily acquire vehicle net weights.

AXIS® FRICTIONLESS CENTERING SYSTEM

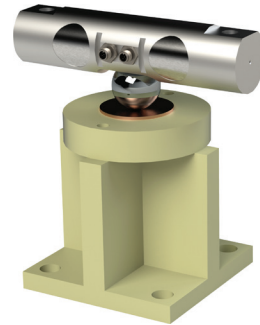

The axis' durable ball and cup system utilizes gravity to restrain deck movement and vibration; in fact, the heavier the load is, the better.


WATERPROOF STAINLESS STEEL LOAD CELLS

The IP69K-rated, 75,000-lb digital SmartCells are completely encapsulated and filled with a potting compound to fill all internal voids and prevent any potential for moisture entering.



OPTIONAL USB EXTERNAL FLASH DRIVE

The low-cost 2XX-USBA option card for the 225D allows you to easily track all weight transactions daily in remote locations and offload data quickly with virtually unlimited transaction storage.

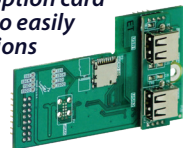

LEGAL FOR TRADE



The ARMOR® Portable truck scale is NTEP and Measurement Canada certified legal for trade.

Cardinal

Cardinal
www.CardinalScale.com