



# DM15

## Price Computing Scale

- 240 oz x 0.1 oz / 15 lb x 0.005 lb
- Ideal for Retail Frozen Yogurt, Ice Cream, Coffee Beans, Nuts, and Candy Stores
- Up to 99 Easy-to-Add PLUs for Quick Reference (14 direct and 85 indirect)
- Displays Weight, Unit Price, and Total Price with Operator and Customer Views

# DM15

## Price Computing

# SCALE




Detecto Model DM15  
Price Computing Scale

## Easy-to-Read Backlit LCD

## Stainless Steel Washdown Platform

DETECTO's low-profile DM15 price computing scale offers up to 99 easy-to-add PLUs for fast reference (14 direct quick keys and 85 indirect PLUs). The DM15 displays Weight, Unit Price, and Total Price on the front and rear backlit LCDs (up to six 0.5-in / 13-mm high digits) for both the operator and customer to view simultaneously. The DM15 offers accurate and reliable weighing for farmers markets, delis, bakeries, candy kiosks, coffee shops, convenience stores, produce markets, and hardware stores. Auto Shut-off, Sleep, and Backlight Off modes extend the retail scale's battery life.

The NTEP legal-for-trade scale's Pre-Pack key saves time by retaining the Unit Price and Tare for repetitive price computing, making the operator's job even faster. Adjustable, nonskid feet and internal bubble level ensure steady and accurate weighing, plus a beep provides audible confirmation of key presses. Ideal for the retail frozen yogurt and ice cream industry, the weighing capacity is 240 ounces by 0.1 ounce accuracy (15 lb x 0.005 lb). The high-grade, molded polymer enclosure with color-coded sealed membrane keypad and lift-off, wash-down stainless steel platform make cleaning easy.

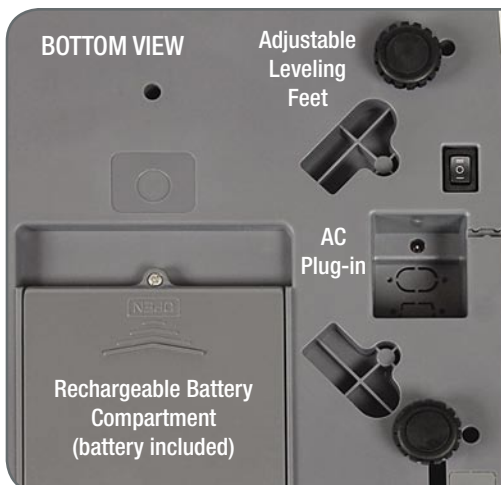


## Rechargeable Battery Pack for Cordless Use in Kiosks and Farmers Markets

DETECTO's DM15 price computing scale offers a dual power source of rechargeable battery pack and 110/120VAC 50/60 Hz adapter (included). Charge it up and it will last 120 working hours of continuous use with the backlight turned off.



# OPERATOR VIEW

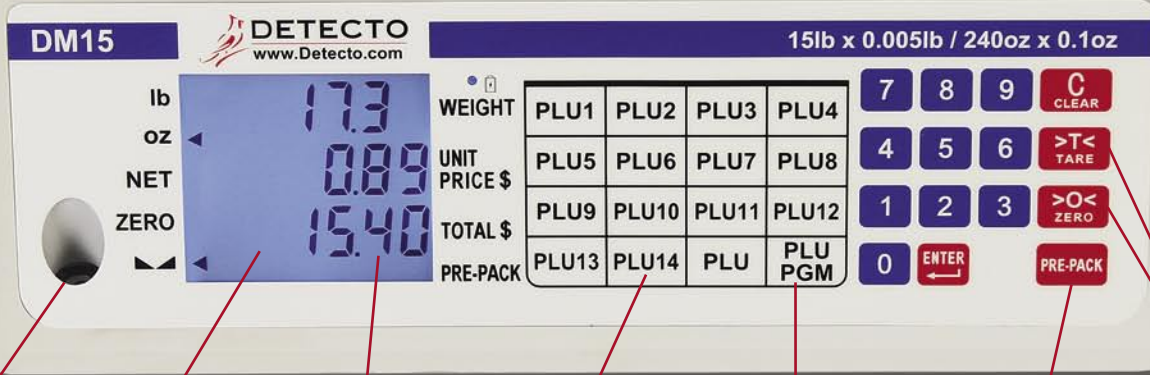

Bubble Level

Backlit Display

0.5-in/13-mm H  
LCD Digits

14 Direct PLUs  
(99 total)

Quick and Easy to  
Add PLUs

PRE-PACK Retains  
Unit Price and Tare

ZERO and  
TARE keys



**Weight, Unit Price, and Total Price Shown Simultaneously  
on the Front and Back Operator and Customer Displays**



# CUSTOMER VIEW

Displays  
up to 6 digits




# DM15

## Price Computing Scale

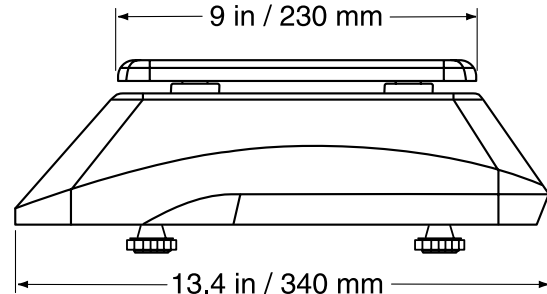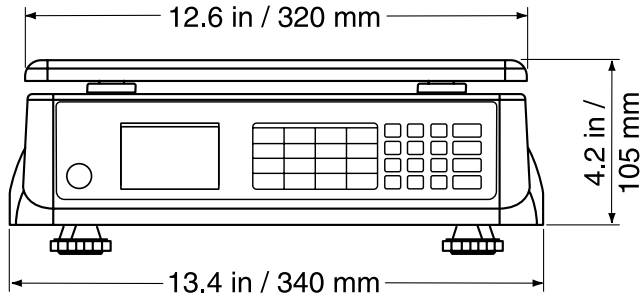

<b>Model</b>	DM15
<b>Capacity</b>	240 oz / 15 lb
<b>Divisions</b>	0.1 oz / 0.005 lb
<b>UPC Code</b>	809161191103
<b>Display</b>	0.5-in/13-mm high, 7-segment LCD with backlight Weight: 6 digits Unit Weight: 6 digits Total Price: 6 digits
<b>Power</b>	12 VDC 1.0A rechargeable battery pack (included) or AC adapter 110/120 VAC 50/60 Hz (included)
<b>Battery Operation</b>	120 working hours of continuous use without backlight turned on / 60 hours with backlight turned on
<b>Leveling Components</b>	4 adjustable rubber feet and integral front-mounted level bubble indicator
<b>PLU</b>	Up to 99 Price Look Ups (14 direct quick keys and 85 indirect)
<b>Zero</b>	Established on power up routine and maintained by auto-zero circuitry
<b>Tare</b>	100% of full scale capacity
<b>Operating Temperature</b>	14° to 104° F (-10° to +40° C)
<b>Storage Temperature</b>	-13° to 122° F (-25° to +50° C)
<b>Scale Construction</b>	High-grade molded polymer
<b>Platform Construction</b>	Stainless steel
<b>Product Weight</b>	7.9 lb / 3.6 kg
<b>Shipping Weight</b>	11.4 lb / 5.2 kg
<b>NTEP</b>	Certificate of Conformance No. 13-058
<b>Accuracy Class</b>	III

*Detecto Scale reserves the right to improve, enhance, or modify features and specifications without prior notice.*

 **DETECTO**<sup>®</sup>  
A Division of Cardinal Scale Manufacturing Co.  
203 E. Daugherty, Webb City, MO 64870 USA  
Ph: 417-673-4631 or 1-800-641-2008 Fax: 417-673-5001  
[www.Detecto.com](http://www.Detecto.com)

**Mobile:** [m.detecto.com](http://m.detecto.com)

**SOLD BY:**