



# SOLAR POWERED HANGING SCALE



LEGAL FOR TRADE

- Exclusive solar powered design for optimal efficiency
- 30 lb / 15 kg capacity for versatile weighing use
- Never replace a battery – completely solar powered
- Digital speed for instantaneous weight readouts
- Pinpoint accuracy to 0.01 lb / 0.005 kg
- NTEP legal for trade (Certificate of Conformance No. 15-009)
- Large 1-inch-high, easily-visible LCD readouts
- Easy to operate – no buttons to press
- Automatic zero tracking
- Includes stainless steel produce pan, bow, and two industrial-grade steel S hooks

DETECTO Model SCS30  
Solar Hanging Scale

*From the name brand in foodservice scales since 1900... DETECTO*



FARMERS  
MARKETS



PRODUCE  
SECTIONS




HARDWARE  
STORES

 **DETECTO**  
*www.Detecto.com*



# SOLAR POWERED HANGING SCALE

**DETECTO's exclusive digital solar hanging scale** is powered completely by light and never requires battery replacement. The model SCS30 is NTEP approved legal for trade making it ideal for grocery stores, farmers markets, hardware stores, and roadside produce stands where customers pay by weight. The 30 lb/15 kg capacity and 0.01 lb/0.005 kg divisions offer you pinpoint measurement accuracy. The bold 1-inch-high LCD displays instant digital readouts. A stainless steel produce pan, hanging assembly, and two S-hooks are included, so the solar-powered scale is ready to use right out of the box, just add light!

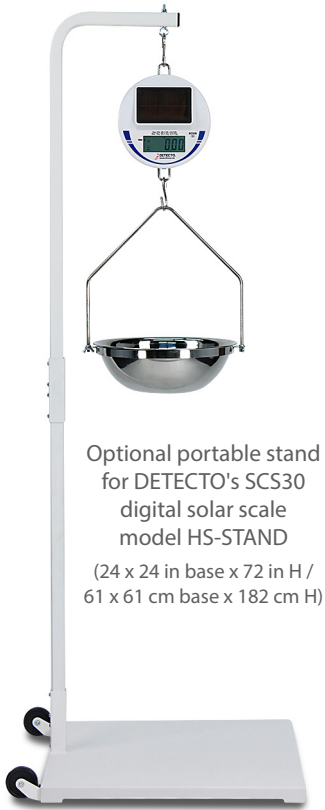

Optional portable stand for DETECTO's SCS30 digital solar scale model HS-STAND

(24 x 24 in base x 72 in H / 61 x 61 cm base x 182 cm H)

The SCS30 should not be left in direct sunlight and requires a minimum of 400 lux for operation.

<b>Capacity</b>	30 lb x 0.01 lb / 15 kg x 0.005 kg
<b>Units Conversion</b>	lb / kg
<b>Power</b>	Solar cell
<b>Solar Type</b>	Amorphous silicon solar panel
<b>Lighting Requirements</b>	Minimum 400 lux
<b>Recommended Placement</b>	Indoors - direct light   Outdoors - indirect light (do not operate in direct sunlight)
<b>LCD Digits</b>	Five-digit, seven-segment, 1.0 in / 25 mm high bold digits
<b>LCD Display Size</b>	3.9 in W x 1.4 in H / 9.9 cm W x 3.6 cm H
<b>Annunciators</b>	lb, kg, zero, solar charge status
<b>Button</b>	Zero/Tare button (located on bottom of scale)
<b>Certification</b>	NTEP legal for trade
<b>Accuracy Class</b>	III
<b>NTEP Certificate Number</b>	15-009
<b>Temperature Range</b>	32° F to 104° F (0° C to 40° C)
<b>Construction</b>	Polycarbonate scale, stainless steel pan and bow
<b>Includes</b>	SCS30 digital scale, 2 S-hooks, 1 bow assembly, 1 ring assembly, 2 pan bow nuts, 2 wing nuts 5/16-18, 1 pan with 3 drainage holes
<b>Scale Dimensions</b>	8.8 in diameter x 3.8 in D / 22.4 cm diameter x 9.7 cm D (round portion)
<b>Overall Dimensions</b>	16 in diameter x 32 in H / 40.6 cm diameter x 81.3 cm H (including all components)
<b>Pan Dimensions</b>	13.7 in diameter x 4.4 in H / 34.8 cm diameter x 11.2 cm H
<b>Product Weight</b>	4.5 lb / 2.0 kg
<b>UPC Code</b>	809161194401

Detecto Scale reserves the right to improve, enhance, or modify features and specifications without prior notice.

**DETECTO**  
*www.Detecto.com*

203 E. Daugberty, Webb City, MO 64870 USA  
Ph: 417-673-4631 or 1-800-641-2008 Fax: 417-673-5001

Mobile: [m.detecto.com](http://m.detecto.com)



SOLD BY: